


# Deep Creek Lake


## Shoreline Erosion Control Options

- NOTES:
- Place Fiber Rolls Parallel to Shore on Horizontal Contour
  - 2-3" Trench to be Dug for Placement of Fiber Roll
  - Stakes to be Placed 12" Apart
  - Fiber Mat to Cover Remaining Exposed Area Above Fiber Roll, Mat To Be Worked Around Existing Native Vegetation
  - Install (75) Chrysogonum virginianum (Green-N-Gold) in fiber mat

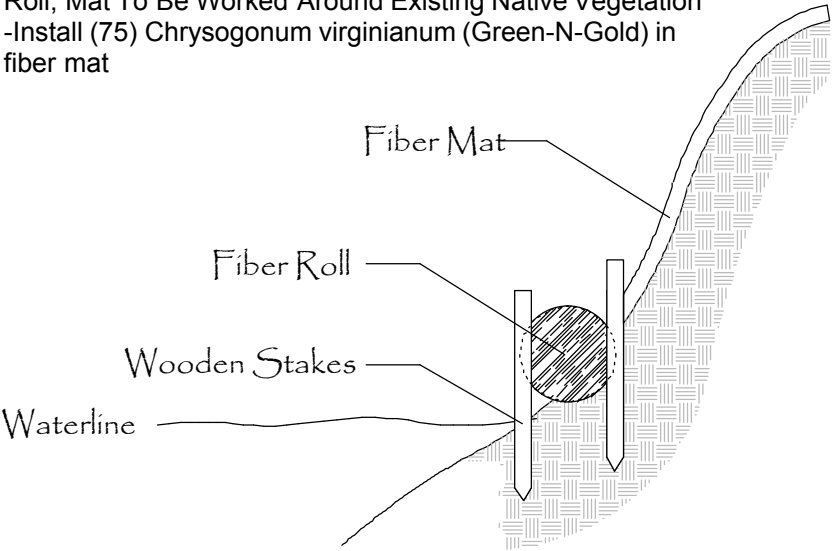

Existing Shoreline

SCALE: NONE

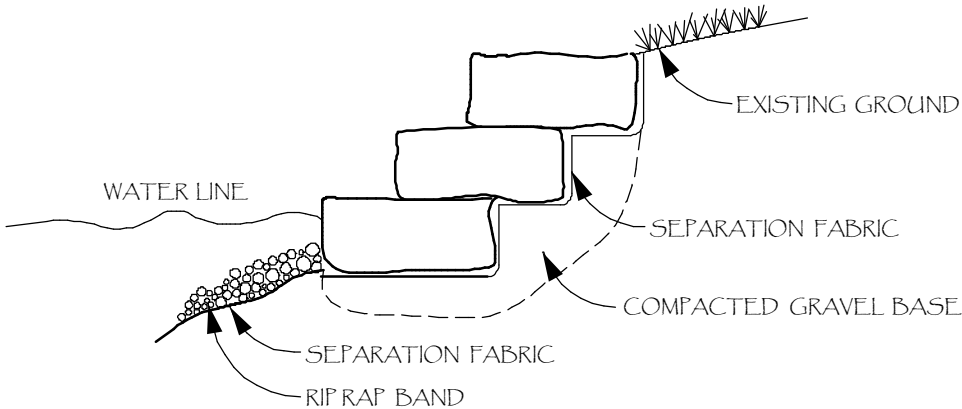


Stacked Stone Shoreline Wall

SCALE: NONE


## Bioengineered Erosion Control

SCALE: NONE

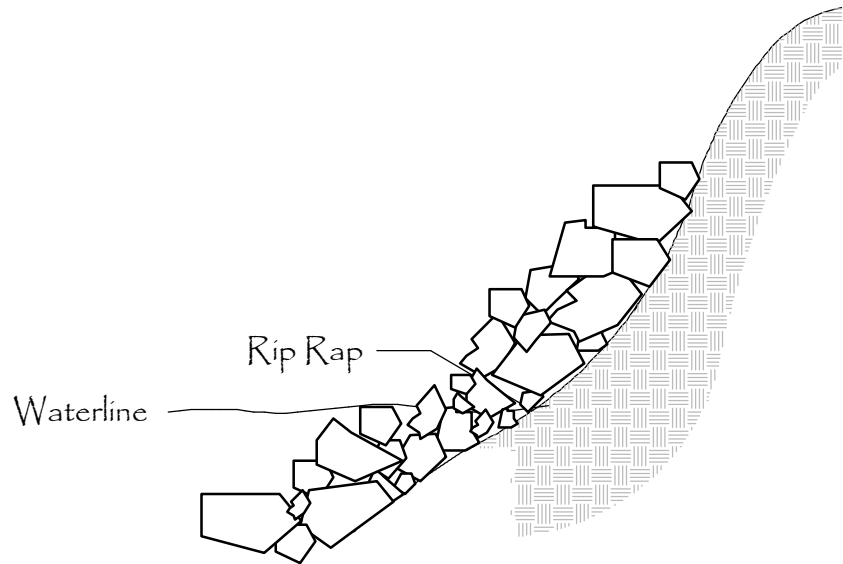

## Rip Rap Erosion Control

SCALE: NONE

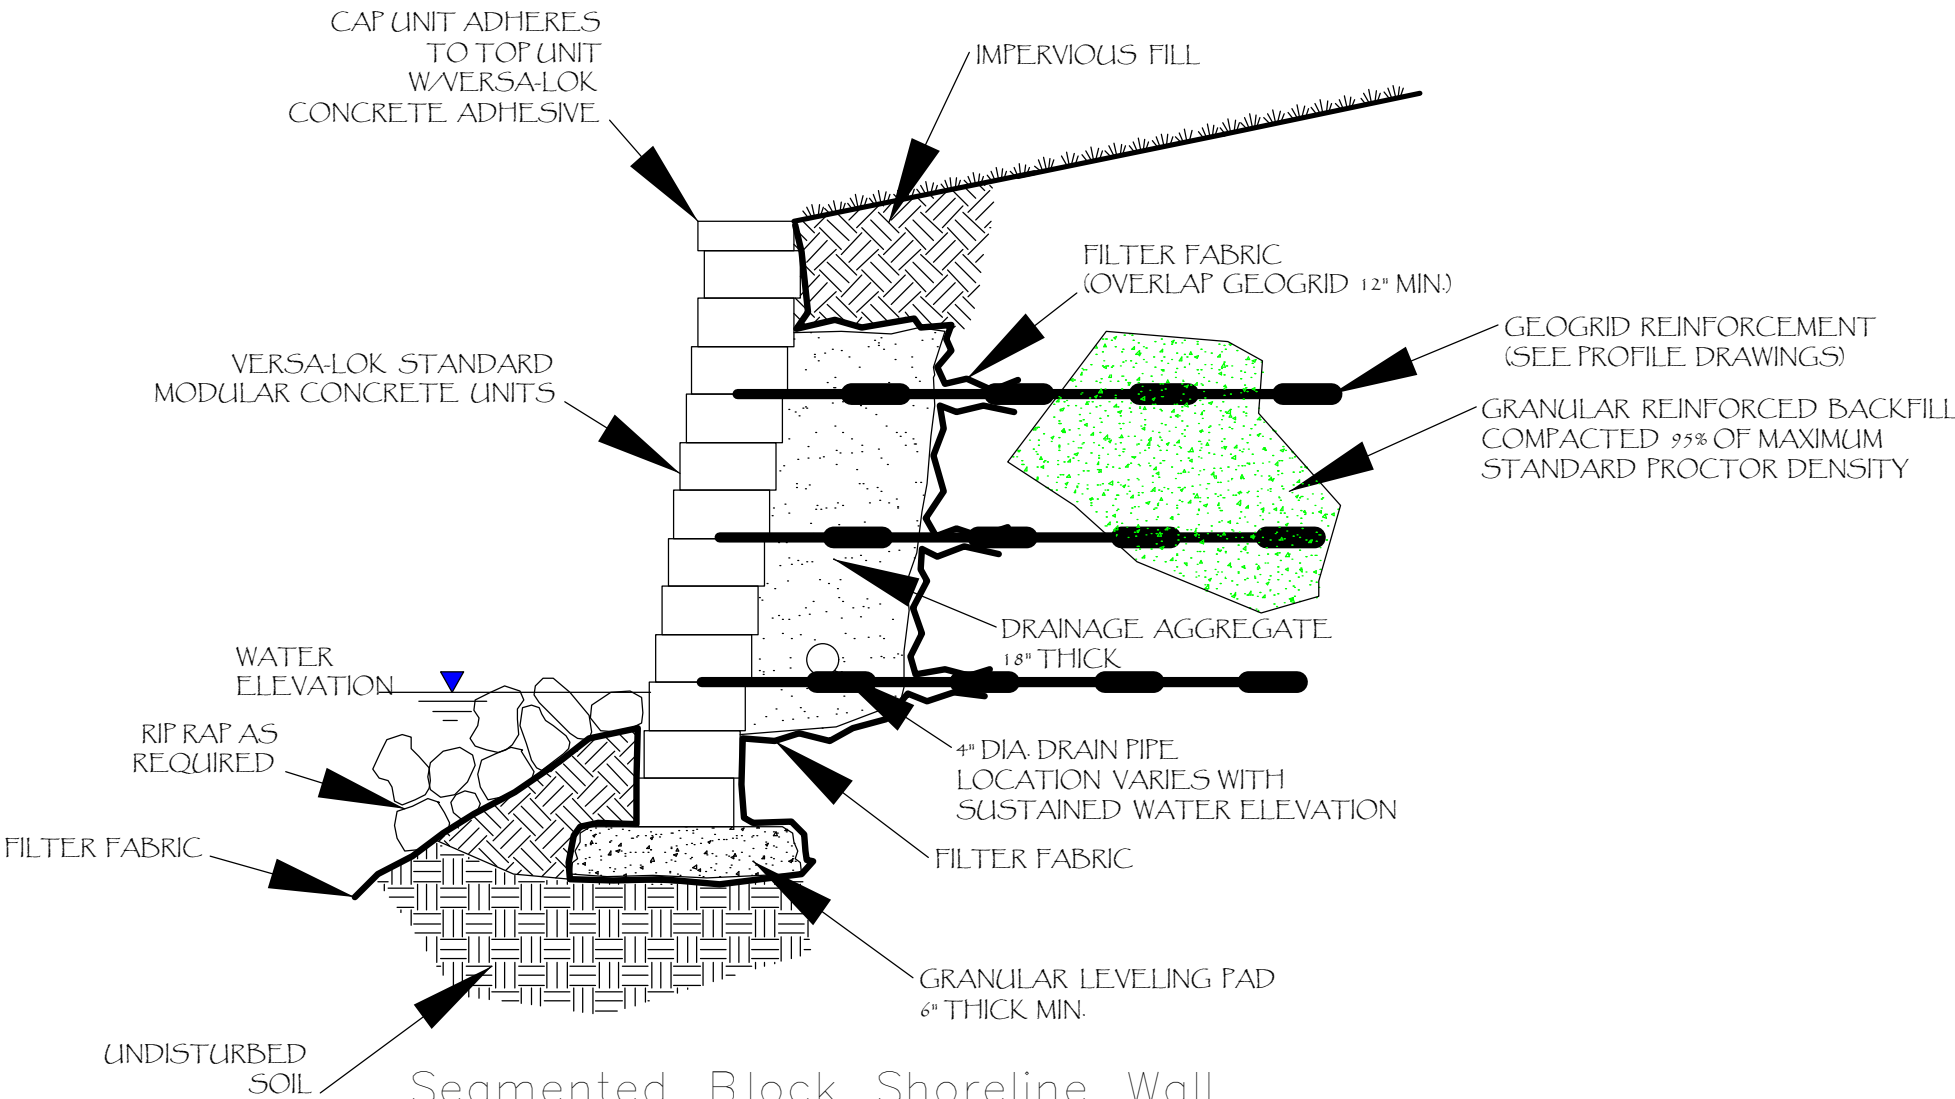

Segmented Block Shoreline Wall

SCALE: NONE